


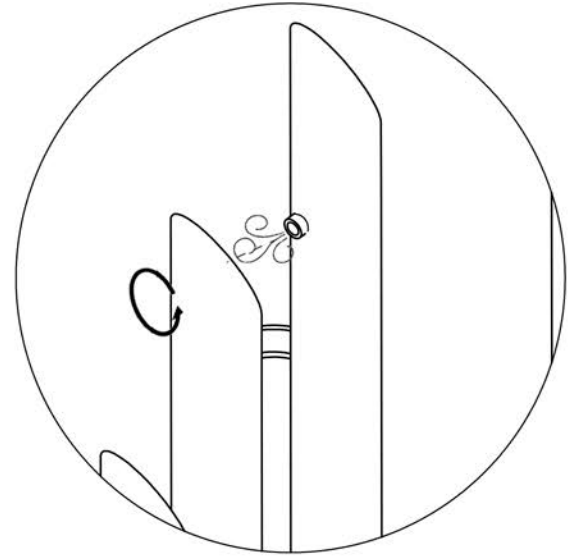


Key	Component	Qty
 A	Screw Cap	3
 B	Screw	3
 C	Wall Plug	3



### Assembly Instructions

Use bleeding valve key to turn bleeding valve on final installation.

Accurately mark out 3 screw holes on floor.

Drill 3 (Ø8mm) holes for floor fixing screw (B) and place the wall plugs (C) into the holes.

Set the radiator holes according to drilled holes and then fix the radiator with screws (B).

Fit the screw caps (A) by rotating.